


K-BUS KNX USB

KNX TP-USB Interface_V1.7

BNTP-USB/0

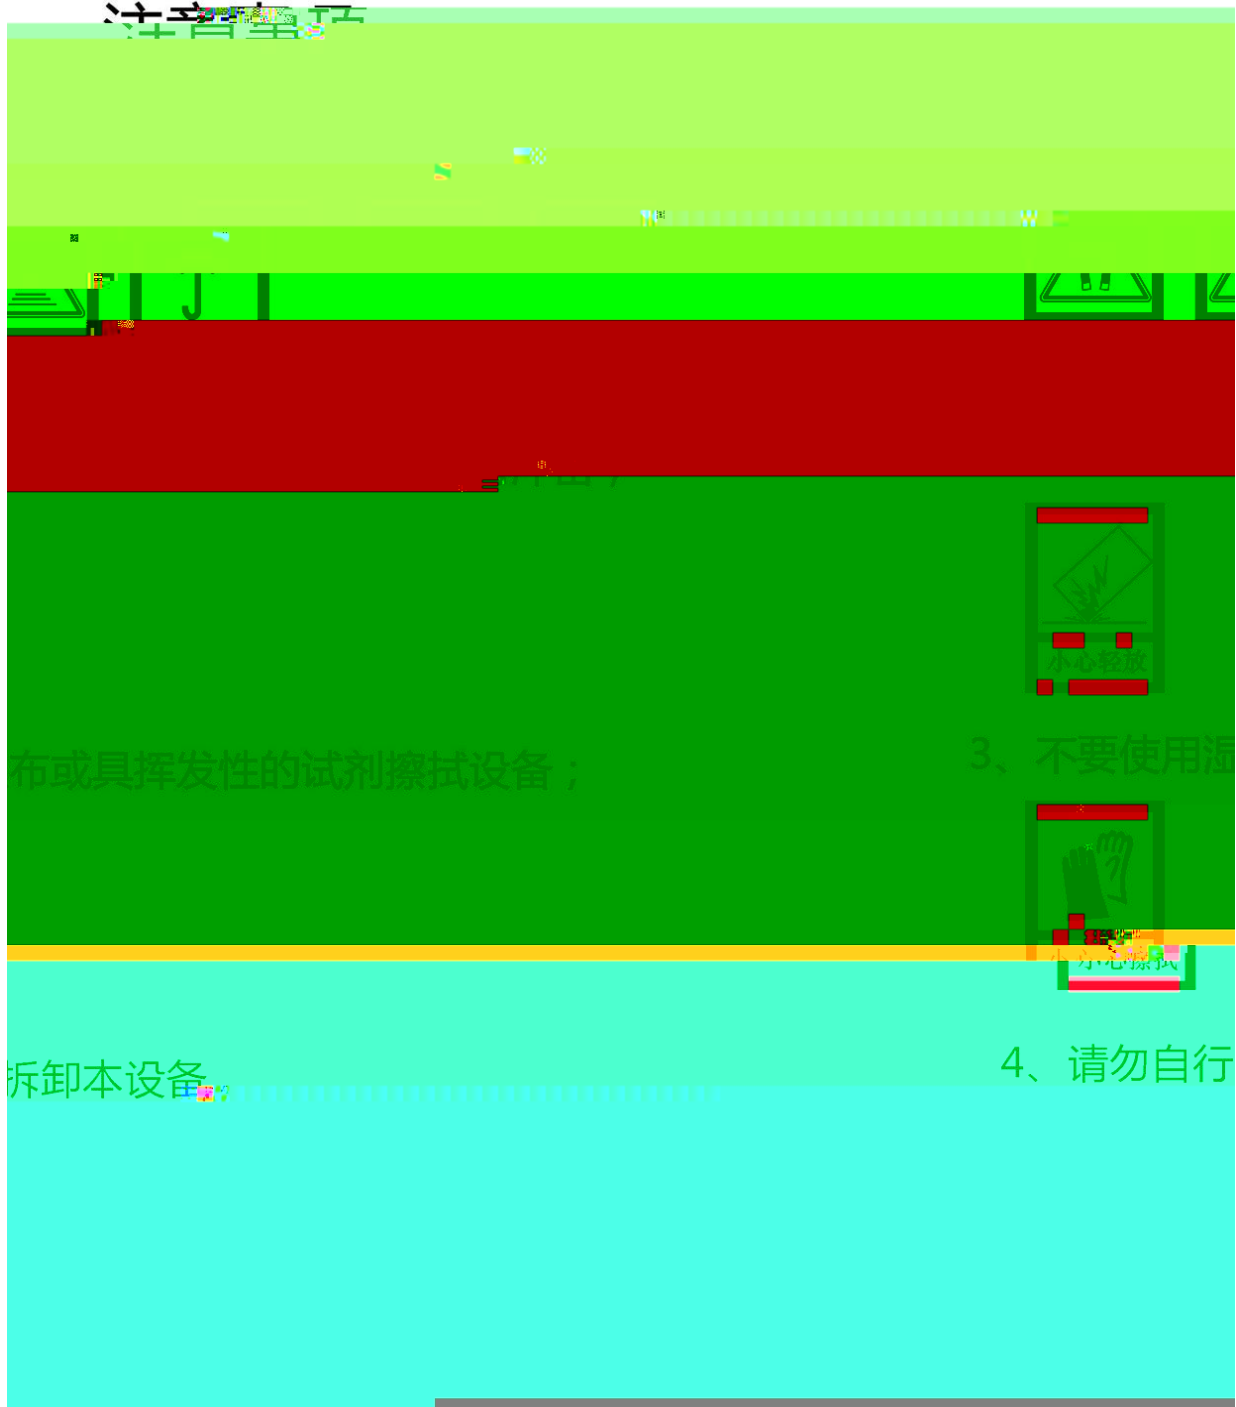

.....	1
.....	2
2.1. BNTP-USB/00.1	2
2.2. BNTP-USB/00.2	3
.....	4
3.1. BNTP-USB/00.1	4
3.1.1.	4
3.1.2.	4
3.2. BNTP-USB/00.2	5
3.2.1.	5
3.2.2.	5
.....	6

KNX USB

KNX

PC

KNX

KNX USB

BNTP-USB/00.1

Type-A

BNTP-USB/00.2

Type-C

USB2.0

USB

KNX

KNX

KNX

USB

USB

KNX

ETS

(

ETS5

KNX

KNX

BNTP-USB/00.1

ETS

ETS5

ETS

10.15.255

KNX USB

APDU

55 BNTP-USB/00.1

240 BNTP-USB/00.2

HID

USB

“cEMI”

2.1. BNTP-USB/00.1


		21-30V DC	KNX
		<3.5mA/24V, <3mA/30V	
		KNX	
		<90mW	
		KNX	
USB		5V DC	
USB		<100mA	
USB		<500mW	
KNX	USB	<600mW	
USB2.0			
KNX		(/)	
		A	USB2.0
		USB	5m
LED		PC	
LED		PC	
LED		KNX	
LED			
		-5 °C ... + 45 °C	
		-25 °C ... + 55 °C	
		- 25 °C ... + 70 °C	
		<93%,	
77.0 × 20.0 × 18.2mm			
0.1kg			

2.2. BNTP-USB/00.2


		21-30V DC	KNX
		<6mA/24V, <6mA/30V	
		KNX	
		KNX	<180mW
USB		5V DC	
USB		<100mA	
USB		<500mW	
KNX	USB	<700mW	
Type-C		USB2.0	
KNX		(/)	
		A	USB2.0
		USB	5m
LED		PC	
LED		PC	
LED		KNX	
LED			
		-5 °C ... + 45 °C	
		-25 °C ... + 55 °C	
		- 25 °C ... + 70 °C	
		<93%,	
		65.0 × 20.0 × 18.2mm	
		0.1kg	

3.1. BNTP-USB/00.1

3.1.1.

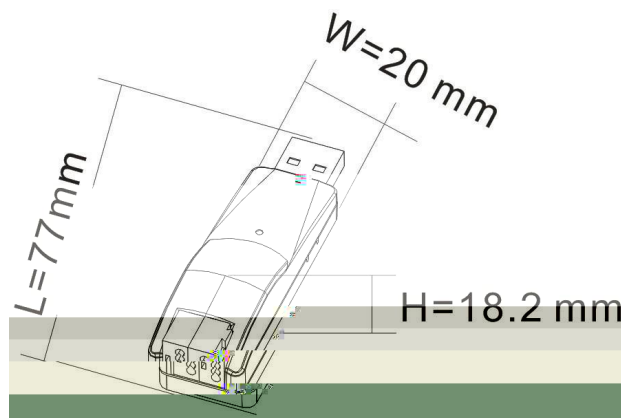

3.1.2.

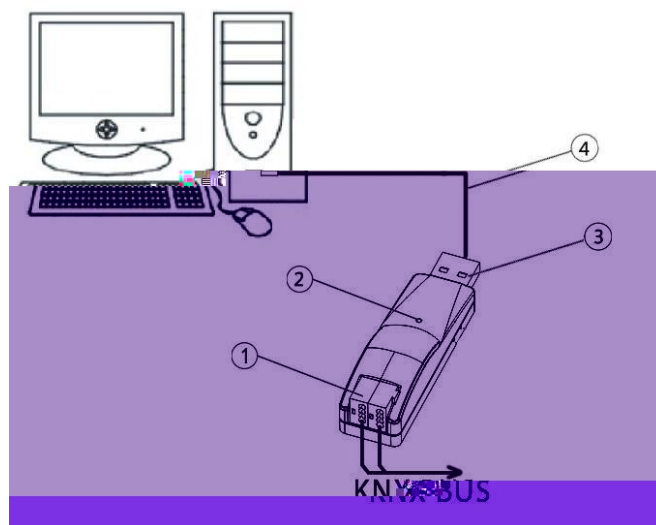

KNX

USB

KNX

USB

PC

USB


PC

USB


USB

3.2. BNTP-USB/00.2

3.2.1.

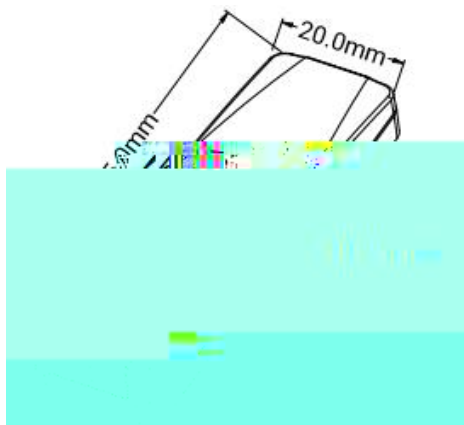

3.2.2.

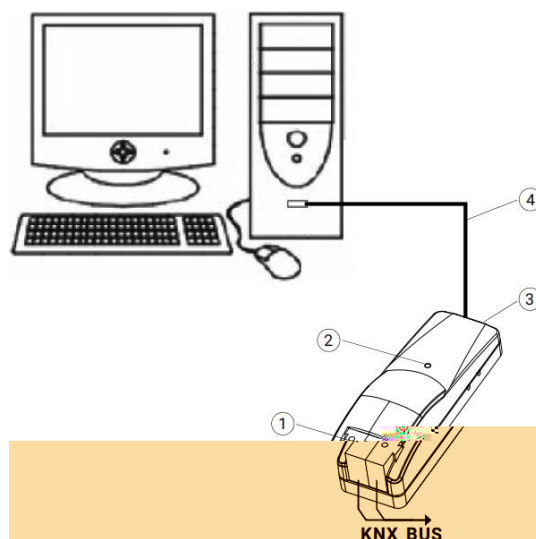

KNX

USB

KNX

USB

PC

USB

PC

Type-C

USB

KNX

4.1


BNTP-USB/00.1

ETS

ETS5

4.2

ETS

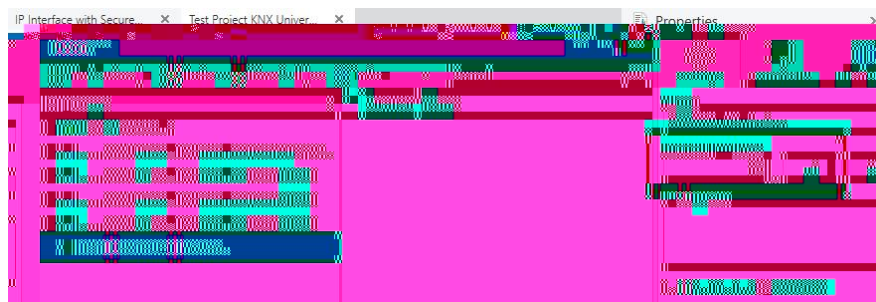

4.2 ETS

--