


注意事项

1. 请远离强磁场、高温、潮湿等环境。

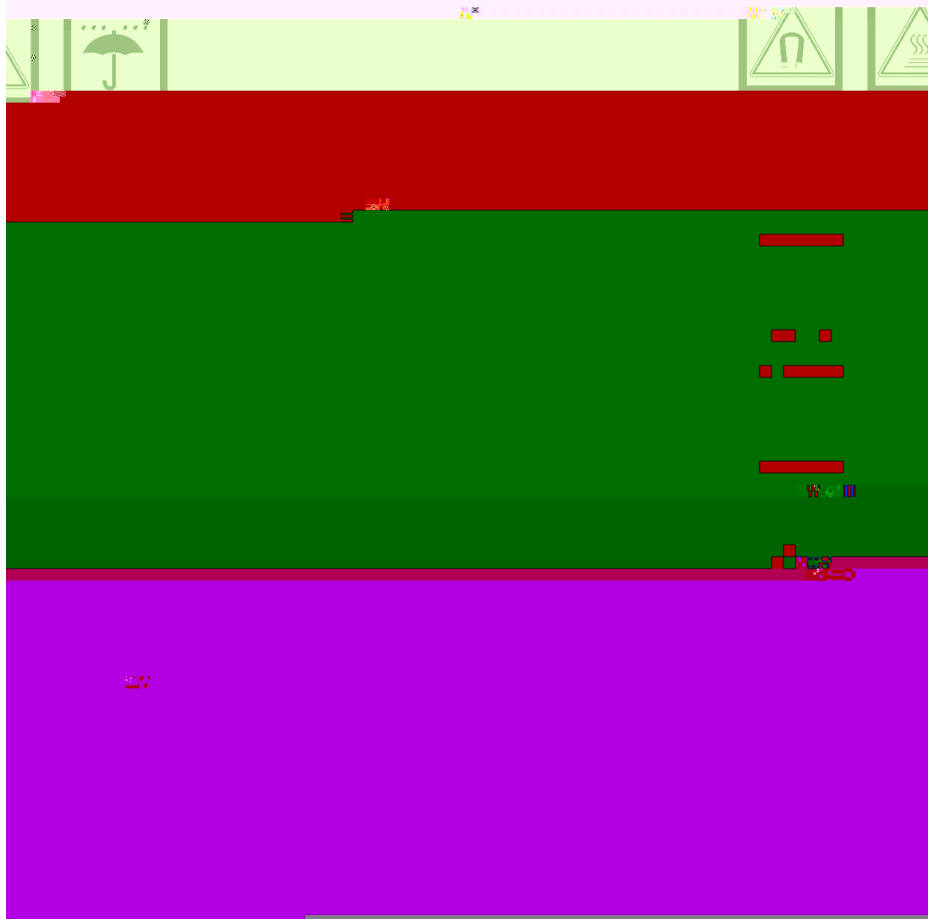

1.1		1
1.2		1
2.1		2
2.2		3
2.3		4
3.1		5
3.2		6
3.3		7
4.1		9
4.2		9
4.3		9
4.3.1		9
4.3.2 PC		11
4.3.3		11
4.4		12
4.4.1		12
4.4.2		12
4.4.3		12
4.4.4		13
4.4.5		13
4.4.6		14
4.4.7		14
5.1		15

5.2		15
5.3		16
6.1		17
6.2		17
6.3		18
6.4		18
6.5		19
6.6		22
6.7		24
6.8		25
6.9		25
6.10		26

RFID (IC)

-
-
-
-
-
-
-

99% 1


Android 6.0.1 CPU A64 4 1.5GHz
1GB DDR3 8GB eMMC TF 128GB
10000


DC 24V ≤ 200mA
≤ 300mA -25 +70
≤ 95%


CMOS 200W
123° 3.5mm
0 lux

LCD 7”
600×1024

(W/H/D) 148.5×363×47 mm

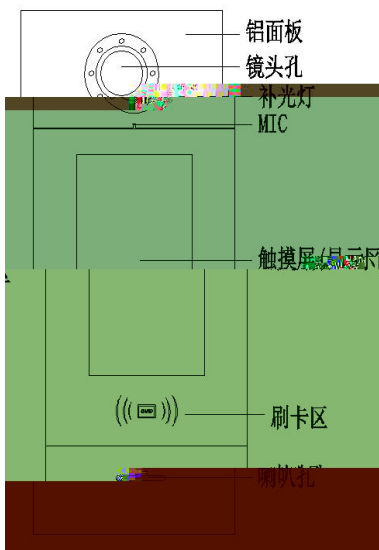

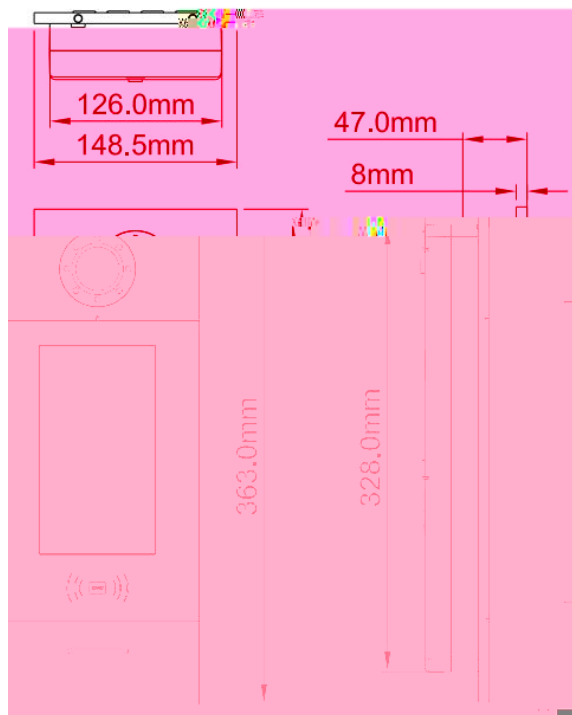

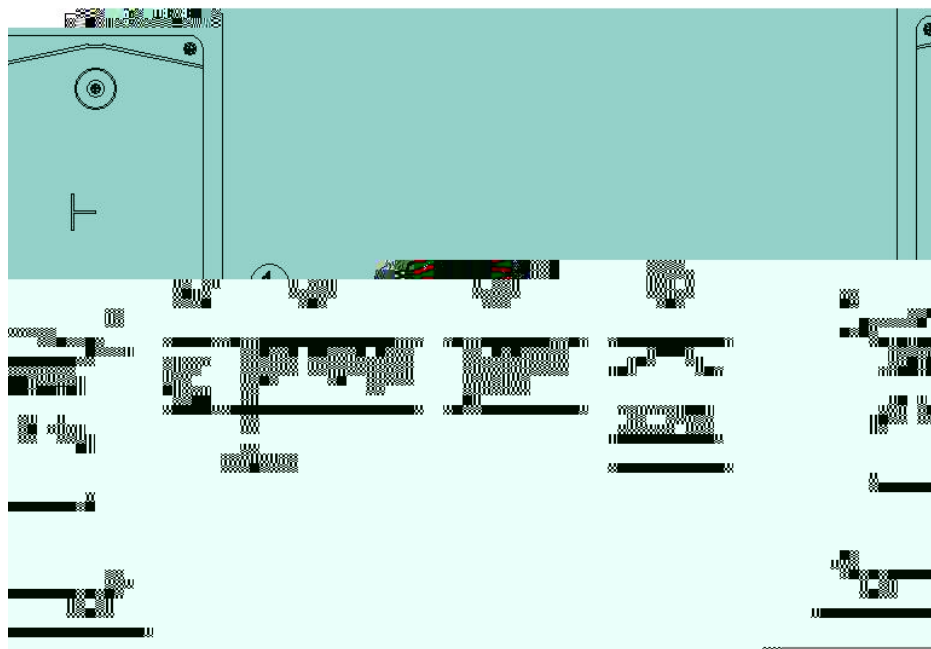

DC 24V

DC 18-30V

+12V

>18V

+12V

COM NO NC

GS



UNLOCK GND

WG-GND WG-D0 WG-D1

DA DB 485



2

W/H/D 1

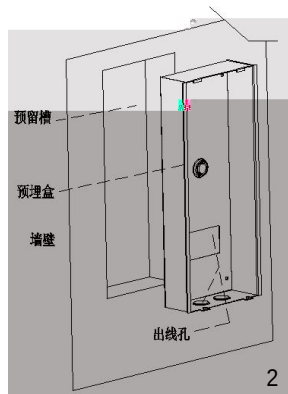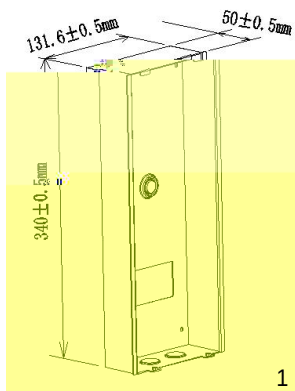


3

4

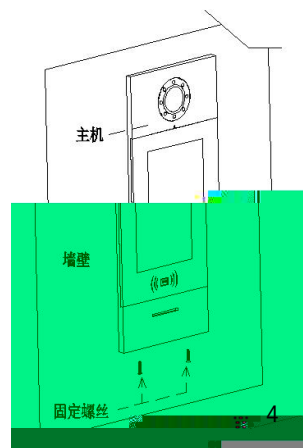
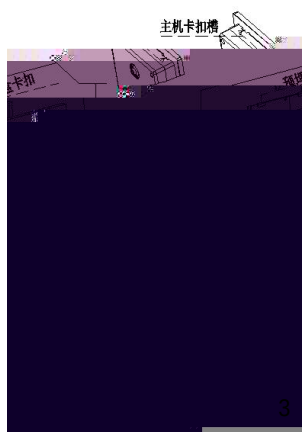


5

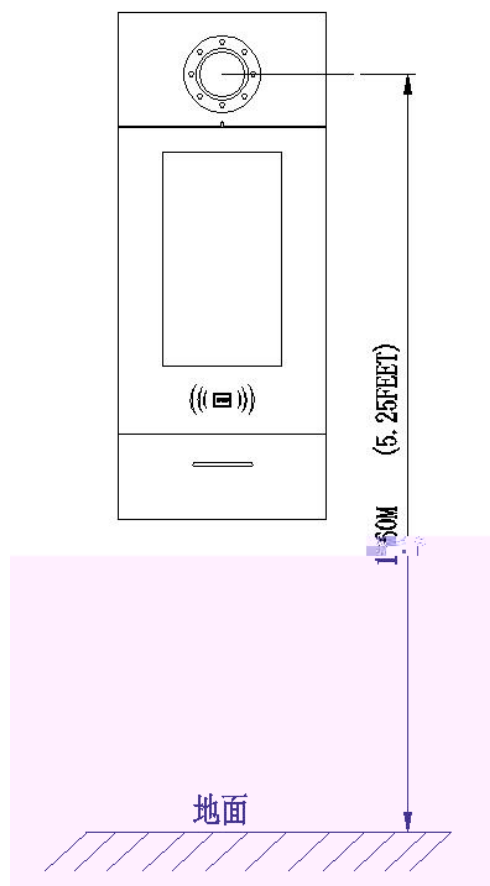

1.6

●

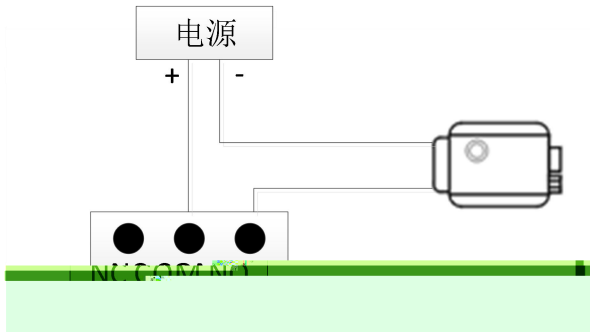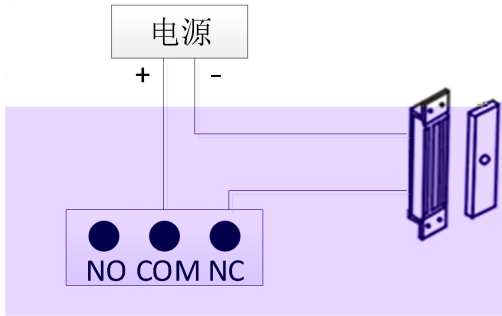

800mA

●



常开型

山崎電機



●



GS → GND



1. GS
2. “ -> -> ”

V1.07



5s

30s




PC



2

1

1

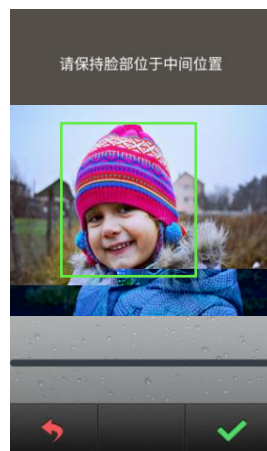

2

“0000”

“801801”

“0000”



2

PC

PC



PC

H系列数字楼宇对讲系统管理中心

系统管理 用户管理 设备管理 历史记录 设备维护 系统设置 系统日志 系统备份 系统恢复 系统升级 系统下载 系统安装 系统运行 系统维护 系统管理 系统操作

添加新用户

姓名: 选择

性别: ☐ 男 ☐ 女

出生日期:

证件号码:

与户主关系:

入住日期:

家庭地址:


手机:

家庭电话:

工作单位:

备注:



添加 删除

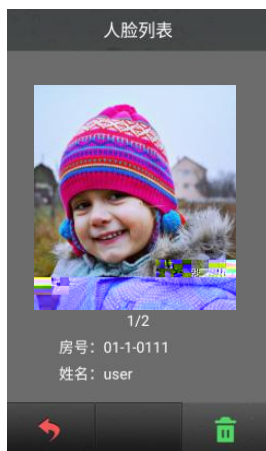

PC

PC

1

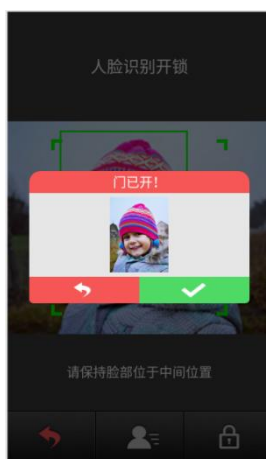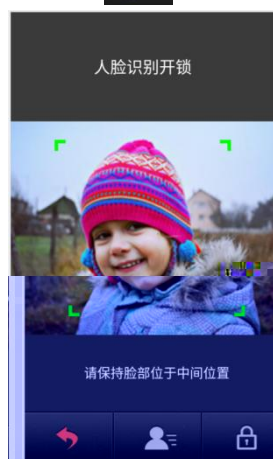

2

3



1



2

APP




1



2

APP

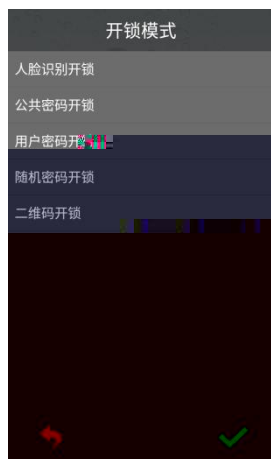

1



2

请输入房号和密码

房号:

密码:

1

2

3

4

5

6

7

8

9

0

*

#

0000

3

1110111

101666666

1



2

请输入公共密码

密码:

1

2

3

4

5

6

7

8

9

×

0

✓


↶


✎

🗑

3

666666

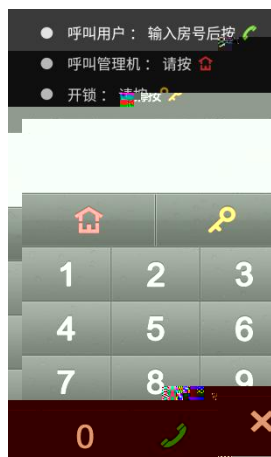

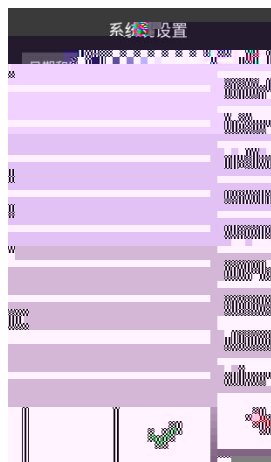



声音设置

回铃音量调节

通话音量调节

门状态报警音开关

其他音开关

时间和日期

年：2019

月：1

日：4

时：5

分：8

秒：24



●

“

”


“

”



●

“.”

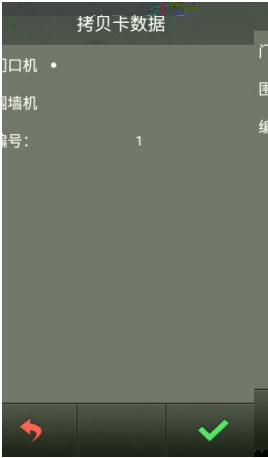

●

IC

IC

IC





“ ”



(

“ ”



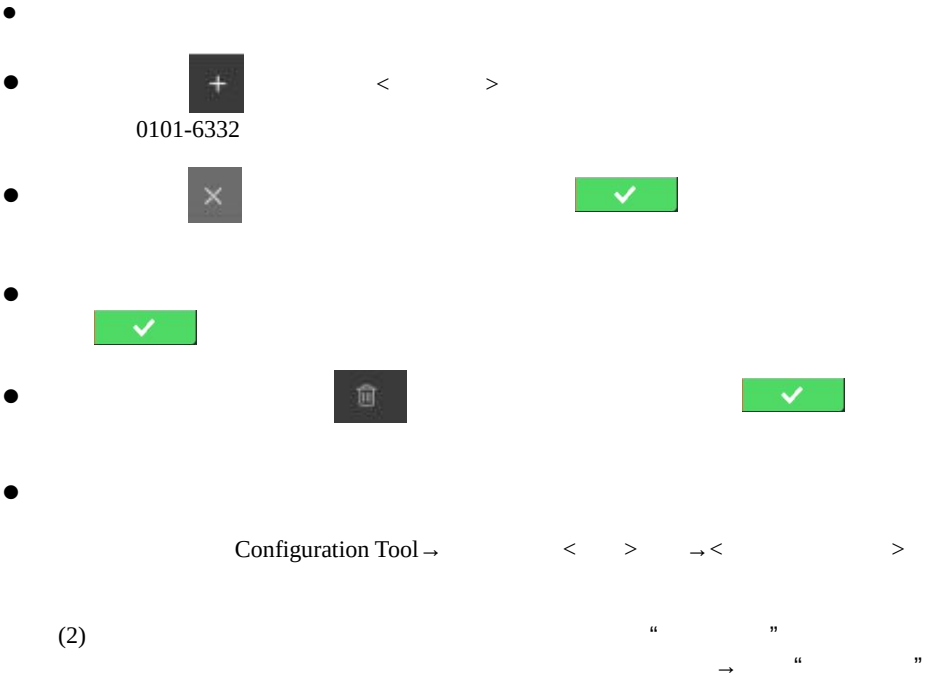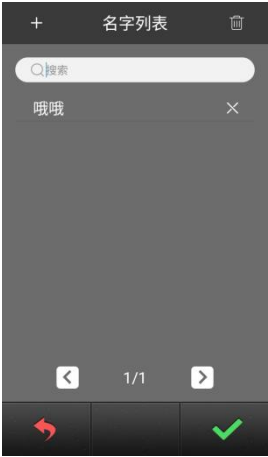

(3) “ ” Excel

→ “ ”

“ ”



开锁持续时间设置


原持续时间: 30

请输入新持续时间



-8—64 0

-8—64 0

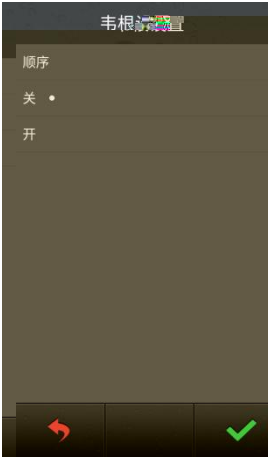





3

4

3

4

818

8

18

1808

18

08

室内机拨号位数设置

3位

4位 •

←

✓

3 4

室内机拨号位数设置

3位

4位 •

←

✓

1 2 3

单元拨号位数设置

1位

2位

3位 •

←



✓

	1	2	3
	1 0	1 +1	2 +1

	3	4
	1 +2	2 +2

-
-

PC

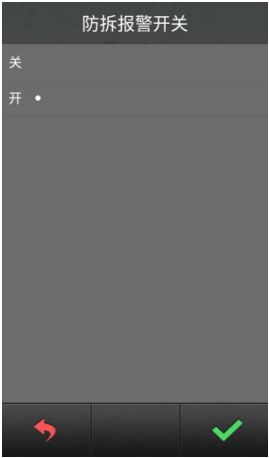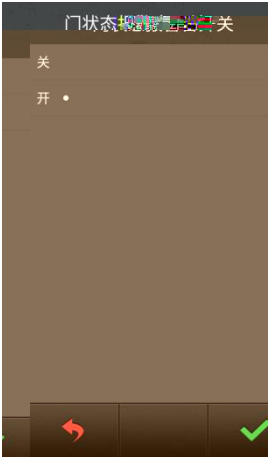

-

“.”

1-99

1-32

设备属性

设备类型：
门口机 •
围墙机 •

编号： 01

← ✓



1-9

1- 10

设备属性

设备类型：
门口机 •
围墙机 •

栋号： 1

单元号： 1

编号： 5

← ✓



人脸识别设置

活体检测开关

单户人脸数设置

阈值设置

← ✓

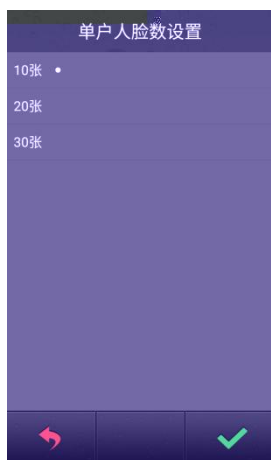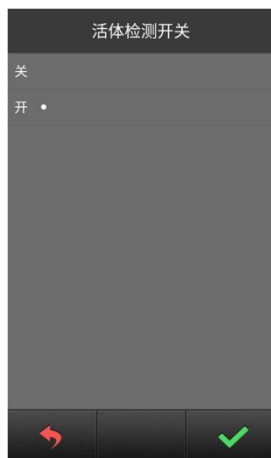

10 20 30



阈值设置

低

中 •

高



6

工程密码修改

请输入旧密码：

新密码：

确认新密码：





IP

MAC





1

2

1

2 APP

10 IP

3 APP